

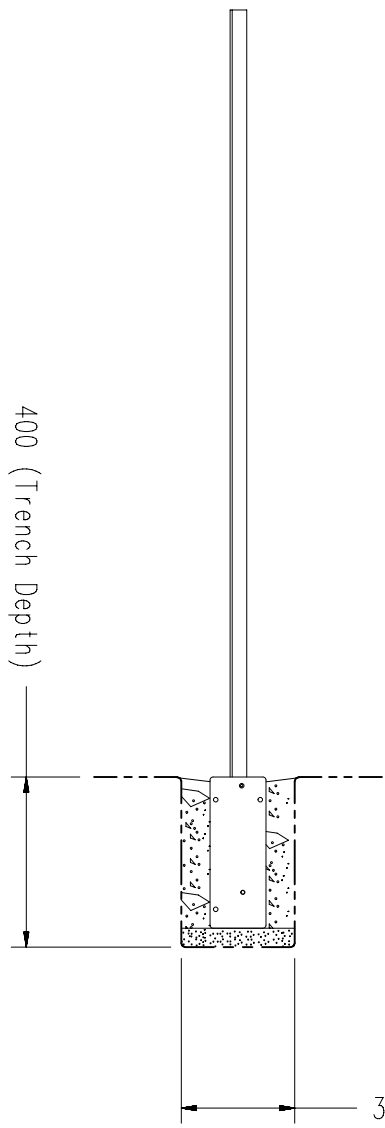


MODEL SPECIFICATION
CHEVROFLEX ULTRA™ – HIGH VISIBILITY BACKING
800mm BEND (SINGLE CHEVRON & SOCKET)
FOR STAGGERED CONFIGURATIONS

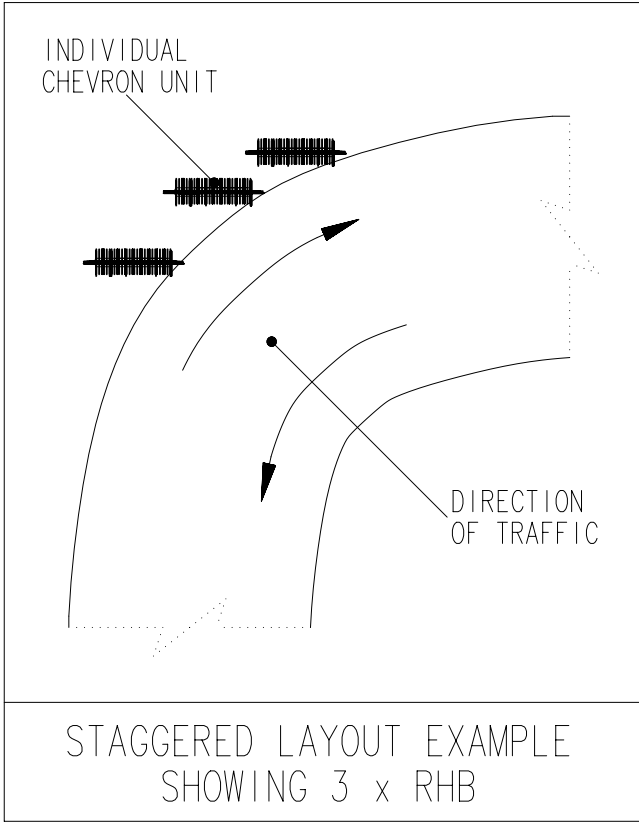

SINGLE RIGHT HAND BEND
(NEAR SIDE)

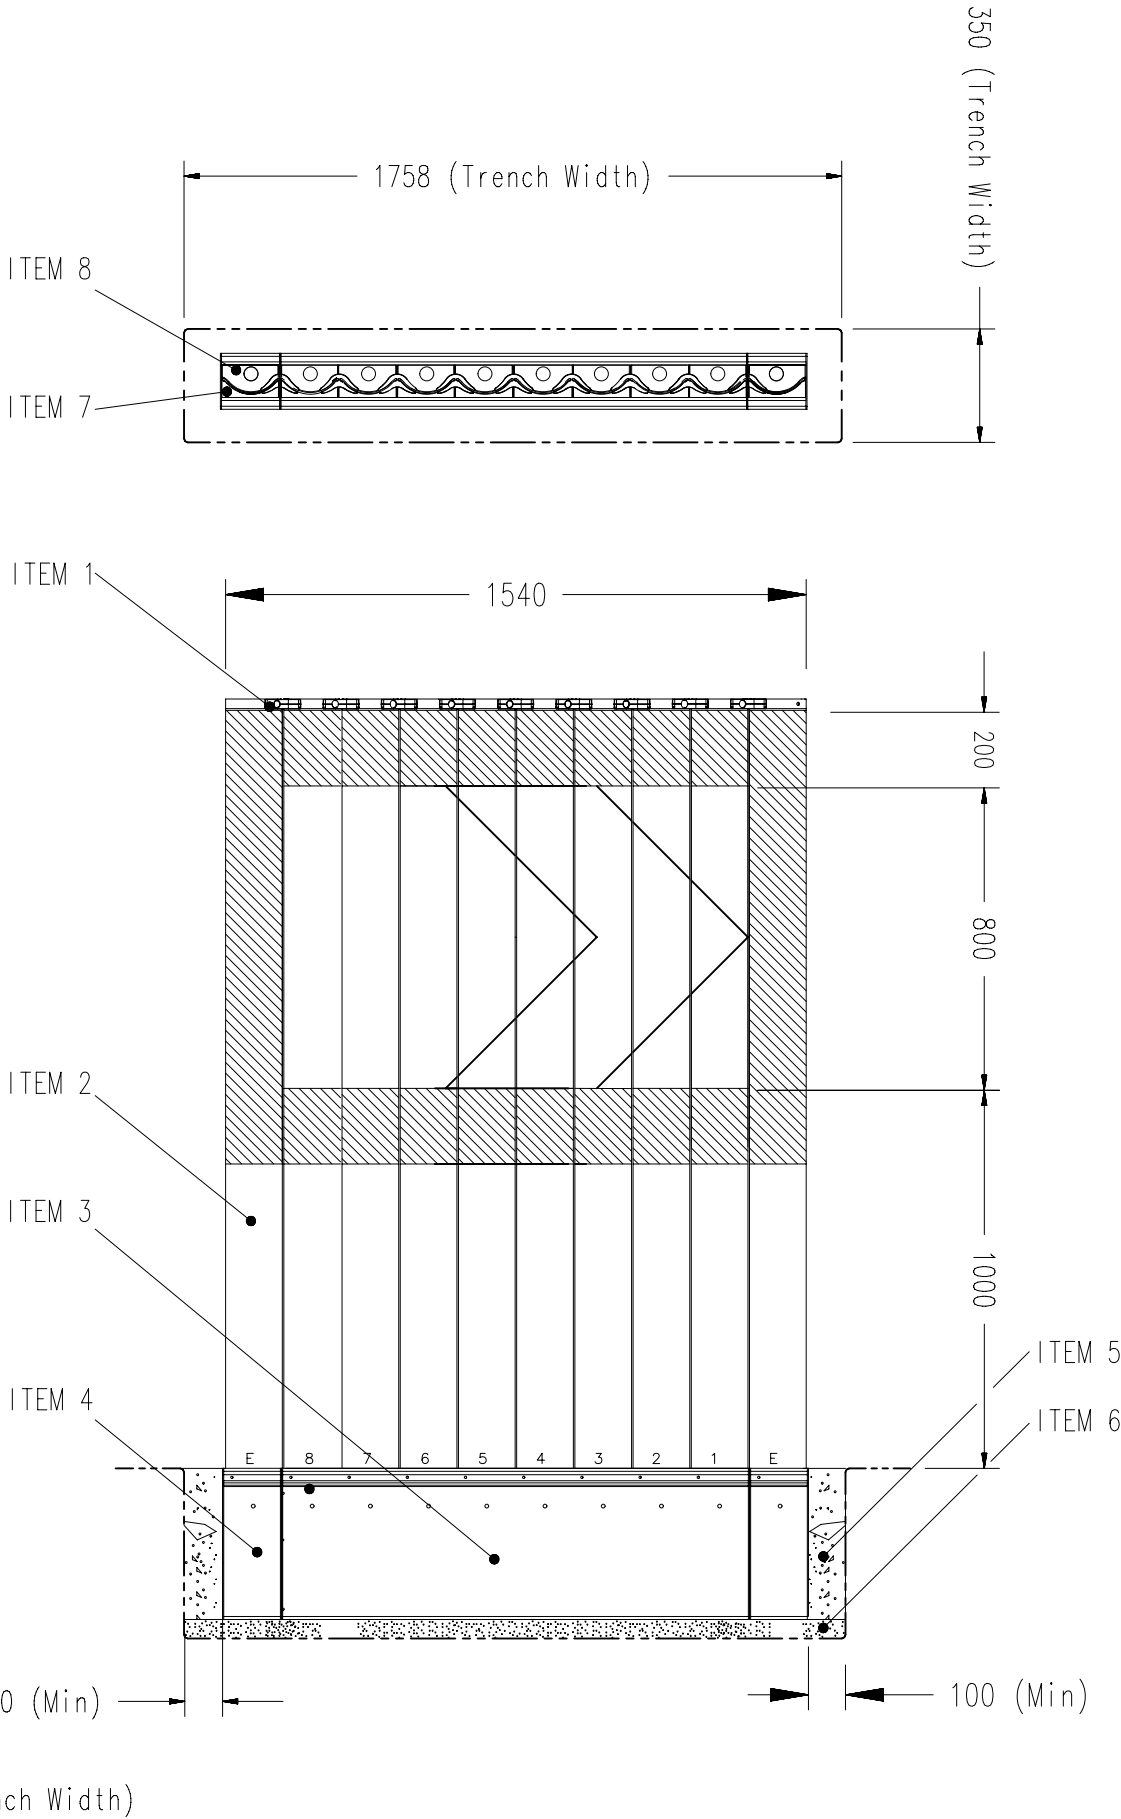

PRODUCT INFORMATION:

- MATERIAL - Impactaflex™ Chevron Uprights
- Galvanised Steel Socket Assembly
- COLOURS - Black posts, White Chevrons & fluorescent yellow or yellow/green High Intensity Surround
- DIMENSIONS - All dimensions in mm unless otherwise stated
- ITEM 1 - Upper Link Moulding
- ITEM 2 - Chevron Upright
- ITEM 3 - 8 Upright Socket Fabrication
- ITEM 4 - 1 Upright Socket (2 off) Fabrication
- ITEM 5 - Quick Setting Concrete (e.g. Grade QC10)
- ITEM 6 - Sand
- ITEM 7 - Front Support / Seal
- ITEM 8 - Rear Retention Support / Seal

TECHNICAL REFERENCE:

- Blanket Authorisation for this product will be given by the DFT following a request by e-letter.
- All retroreflective materials supplied by Glasdon are as recommended in table NAT of the National Annex of BS EN 12899-1 2007 Fixed Vertical Road Signs.


Microprismatic retroreflective materials used on our products meet the requirements of BS 8408 2005 Road Traffic Signs. Testing and Performance of Microprismatic Retroreflective Sheet Materials when sited normally and used for their normal application.

INSTALLATION GUIDE:


- Chevroflex Ultra to be orientated as shown in front view, to ensure it is positioned correctly.
- Ensure arrows are positioned in correct orientation.
- Recommended trench size for 1 chevron as shown.
- Please check site for buried services prior to installation.
- Suitable for soft and hard ground.
- Avoid contact with hot tarmac/adam as this will seriously impair the performance of the Chevroflex Ultra socket and chevron uprights.
- We recommend installing with quick setting concrete (e.g. Grade QC10), but exact installation requirements should be assessed from a site survey.
- Dig trench using sockets as a guide adding 100mm min. at each end. Ensure socket top is flush with ground level and horizontal. Place in trench and check with spirit level. Ensure ground sockets do not protrude above ground level. A protruding socket could suffer serious damage affecting the retention and alignment of the upright.
- When back filling with quick setting concrete, ensure that no concrete enters the socket.
- Refer to the full 'Chevroflex Ultra Installation Instructions' for comprehensive installation details.
- Ensure upper link mouldings are inserted correctly, to stabilise uprights refer to user installation instruction.

OPTIONAL PARTS / SPARES:

- 6mm & 5mm Allen keys to enable replacement of uprights.
- Individual replacement uprights available.
- Front support / seal & Rear retention support / seal kits.
- Upper link mouldings

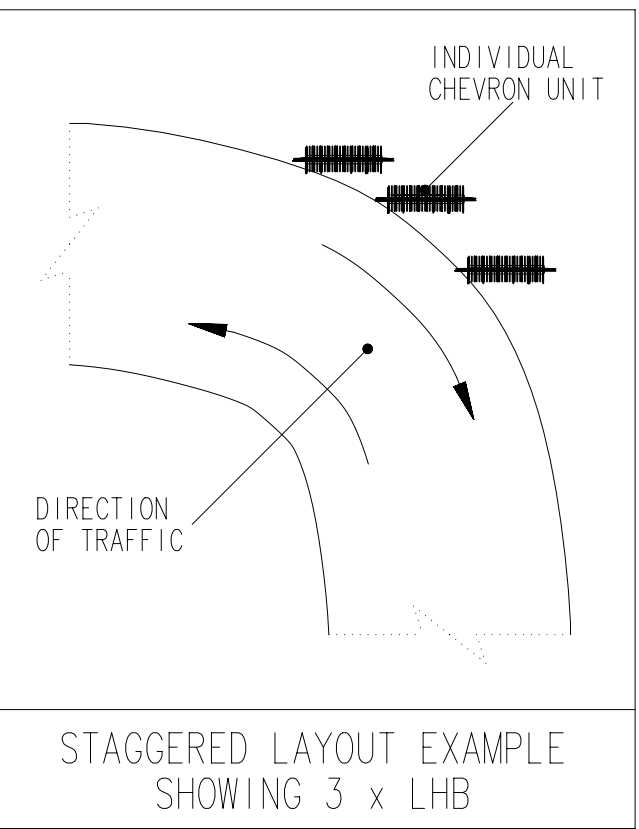

SINGLE LEFT HAND BEND
(OFF SIDE)

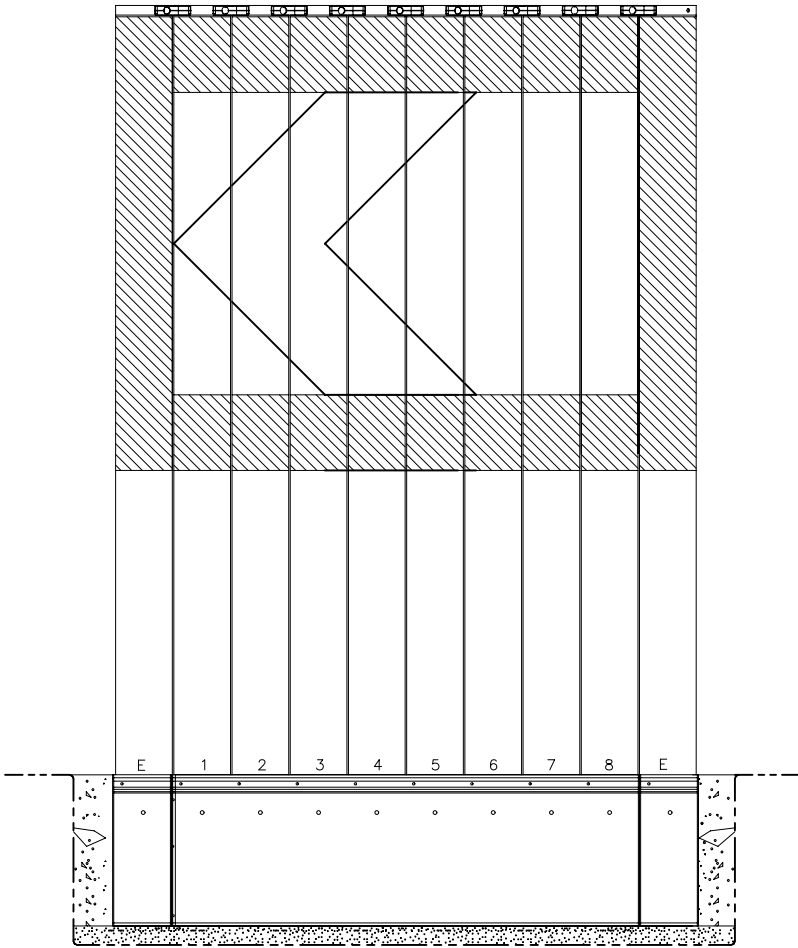

PRODUCT DATA:

NO. OF CHEVRONS	SIGN LENGTH	TRENCH LENGTH
1	1540	1758
2	2774	2996
3	4008	4234
4	5242	5472
5	6476	6710
ADDITIONAL CHEVRON C/W SOCKET	+ 1234	+ 1238
ALL DIMENSIONS IN MM.		

PLEASE NOTE: USE NUMBER OF SINGLE UNITS AS REQUIRED



website: www.glasdon.com

e-mail: sales@glasdon.com

Telephone: 01253 600400

Facsimile: 01253 792558

Copyright and/or design right in this representation and the product it depicts is reserved by Glasdon Group Limited. The issue of this drawing, is a confidential disclosure of its contents, and is made on condition that it is neither disclosed to a third party, nor any item described here in and designed by Glasdon Group Limited, is produced either in whole or in part without the written consent of Glasdon Group Limited.

SPECIFICATION NUMBER - 025069-503

ISSUE 03

GLASDON GROUP LTD 08/03/11

SHEET SIZE:A2